



JANNY MT



Flexible Installations of Controlled Atmosphere Units

Early apple



Varieties:

Gala

Elstar

...

Early apple

- Increase sales period
- Maintaining the sanitary and gustative quality
- Maintaining colour and firmness
- Avoiding weight loss (less than 1% after 210 d)
- Keep the Sugar/Acidity rate


Picking recommendations

- Control starch regression to start harvest
- Store first harvested apples for Janny MT modules

Varieties	Starch Regression
Gala	6 (CTIFL code)
Elstar	4 (CTIFL code)

Key figures

1. Use Janny MT module 610 - 5
2. Fill module with **300 kg loose**
3. Put in cold storage at **+2°C**
4. **Wait until the products are cooled to heart**
5. Close the lid
6. Check gas stabilisation
7. Possible preservation up to **210 days**
8. Open modules
9. Let the module **24 hours with open lid in cold room for rehabilitation**

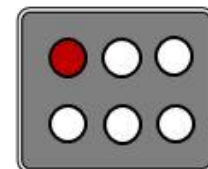


5 Open membranes
1 Cap on

	Temperature	O ₂ rate	CO ₂ rate	Preservation Time
Classic cold	+2°C	21 %	0 %	120 d
Janny MT CA	+2°C	1 to 5 %	1 to 5 %	210 d

Ideal curve

Gas content monitoring for Early apples

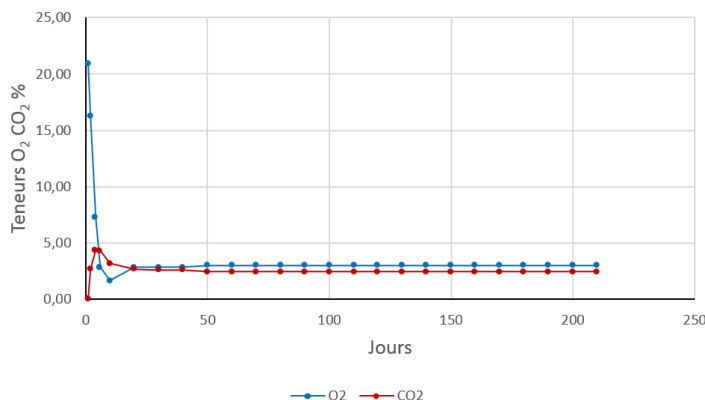

Sté JANNY MT SAS

La Condemine 71260 Péronne France

Tél : 0033.3.85.23.96.20

Fax : 0033.3.85.36.96.58 / 0033.3.85.23.96.29

Mail : jannymt@jannymt.com

Web : www.jannymt.com