



JANNY MT



Flexible Installations of Controlled Atmosphere Units

Plum



Varieties:

Reine-Claude

Questech

Mirabelle

Greengage

...

Sté JANNY MT SAS

La Condemine 71260 Péronne France

Tel : 0033.3.85.23.96.20

Fax : 0033.3.85.36.96.58 / 0033.3.85.23.96.29

Mail : jannymt@jannymt.com

Web : www.jannymt.com

Plum

« Janny MT preservation »


- Marketing part of production in September
- Maintaining flavour quality
- Maintaining colour
- Saving on labour on weekends and public holidays
- Storing before bad weather (avoiding bursting in the orchards)
- Avoiding weight loss (less than 1% after 40 d)

Picking recommendations

- Match maturity to the desired preservation time
- Pick extremely healthy products
- Do not store products after rain

Key figures

1. Use Janny MT module 610 - 4
2. Fill module with
150 kg on trays for Reine-Claude and Questech
180 kg on trays for Mirabelle
3. Put in cold storage at +2°C
4. **Wait until the products are cooled to heart**
5. Close the lid
6. Check gas stabilisation
7. Possible preservation up to **20 to 55 days**
8. Open modules
9. Let the module **12 hours with open lid in cold room for rehabilitation**

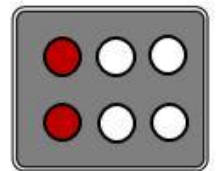


4 Open membranes
2 Caps on

	Temperature	O ₂ rate	CO ₂ rate	Preservation time Mirabelle	Preservation time Reine-Claude	Preservation time Questech
Classic Cold	+0°C	21 %	0 %	10 d	15 to 21 d	15 to 21 d
Janny MT CA	+0°C	1 to 5 %	1 to 5 %	20 to 25 d	50 to 55 d	40 to 45 d

Ideal curve

Gas content monitoring for Plums

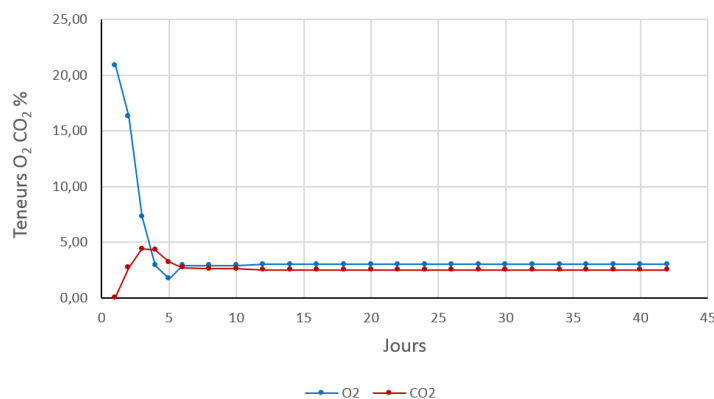

Levels are read using the Tiempo Test measuring instrument

ATCTECPROFTEGBA2109XV1